

X20(c)CP158x and X20(c)CP358x

1 Other applicable documents

For additional and supplementary information, see the following documents.

Other applicable documents

Document name	Title
MAX20	X20 system user's manual
MAEMV	Installation / EMC guide

Additional documentation

Document name	Title
MAREDSYS	Redundancy for control systems

2 General information

Based on Intel Atom processor technology, X20 controllers cover a wide range of requirements. The range of use extends from standard applications to applications with high performance requirements.

The entry into the series is with the Intel Atom processor 333 MHz compatible models X20CP1583 and X20CP3583. With an optimum price/performance ratio, it has the same basic features as all of the larger controllers.

The basic model includes USB, Ethernet, POWERLINK V1/V2 and replaceable CompactFlash card. The standard Ethernet interface is capable of handling communication in the gigabit range. For even more real-time network performance, the onboard POWERLINK interface supports poll response chaining mode (PRC).

Up to 3 more slots are available for additional interface modules to increase flexibility.

- Intel ATOM 1600/1000/600 Performance with integrated I/O processor
- Entry-level CPU is Intel ATOM 333 MHz-compatible with integrated I/O processor
- Onboard Ethernet, POWERLINK V1/V2 with poll response chaining and USB
- 1 or 3 slots for modular interface expansion
- CompactFlash as removable application memory
- Up to 512 MB DDR2-SRAM according to performance requirements
- Controller redundancy possible
- Fanless

3 Coated modules

Coated modules are X20 modules with a protective coating for the electronics component. This coating protects X20c modules from condensation and corrosive gases.

The modules' electronics are fully compatible with the corresponding X20 modules.

For simplification purposes, only images and module IDs of uncoated modules are used in this data sheet.

The coating has been certified according to the following standards:

- Condensation: BMW GS 95011-4, 2x 1 cycle
- Corrosive gas: EN 60068-2-60, method 4, exposure 21 days



4 Order data - X20CP158x



Order number	Short description
X20 PLCs	
X20CP1583	X20 PLC, Atom 333 MHz (compatible), 128 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot cover and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20CP1584	X20 PLC, Atom 0.6 GHz, 256 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot cover and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20cCP1584	X20 PLC, coated, Atom 0.6 GHz, 256 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot cover and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20CP1585	X20 PLC, Atom 1.0 GHz, 256 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot cover and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20CP1586	X20 PLC, Atom 1.6 GHz, 512 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot cover and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20cCP1586	X20 PLC, coated, Atom 1.6 GHz, 512 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 1 insert slot for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot cover and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
Required accessories	
CompactFlash cards	
0CFCRD.016GE.02	CompactFlash 16 GB extended temp.
0CFCRD.0512E.02	CompactFlash 512 MB extended temp.
0CFCRD.1024E.02	CompactFlash 1024 MB extended temp.
0CFCRD.2048E.02	CompactFlash 2048 MB extended temp.
0CFCRD.4096E.02	CompactFlash 4096 MB extended temp.
0CFCRD.8192E.02	CompactFlash 8 GB extended temp.
Included in delivery	
Batteries	
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell
Locking plate	
X20AC0SR1	X20 end cover plate, right
Terminal blocks	
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed
Optional accessories	
Batteries	
0AC201.91	Lithium batteries 4 pcs., 3 V / 950 mAh button cell

Table 1: X20CP1583, X20CP1584, X20cCP1584, X20CP1585, X20CP1586, X20cCP1586 - Order data

Included in delivery

Order number	Short description
4A0006.00-000	Backup battery (see also "Battery" on page 18)
-	Interface module slot covers
X20AC0SR1	X20 end cover plate (right)
X20TB12	X20 terminal block, 12-pin, 24 V coding

5 X20CP158x - Technical data

Order number	X20CP1583	X20CP1584	X20cCP1584	X20CP1585	X20CP1586	X20cCP1586
Short description						
Interfaces	1x RS232, 1x Ethernet, 1x POWERLINK (V1/V2), 2x USB, 1x X2X Link					
System module	Controller					
General information						
B&R ID code	0xD45B	0xC370	0xE21B	0xC3AE	0xC3B0	0xE21C
Cooling	Fanless					
Status indicators	CPU function, Ethernet, POWERLINK, CompactFlash, battery					
Diagnostics						
Battery	Yes, using LED status indicator and software					
CPU function	Yes, using LED status indicator					
CompactFlash	Yes, using LED status indicator					
Ethernet	Yes, using LED status indicator					
POWERLINK	Yes, using LED status indicator					
Temperature	Yes, using software register					
Support						
Controller redundancy	No					
Storage health data support ¹⁾	Yes					
ACOPOS support	Yes					
Visual Components support	Yes					
Power consumption without interface module and USB	8.2 W	8.6 W		8.8 W		9.7 W
Power consumption for X2X Link power supply ²⁾	1.42 W					
Power consumption ²⁾						
Internal I/O	0.6 W					
Additional power dissipation caused by actuators (resistive) [W]	-					
Certifications						
CE	Yes					
UKCA	Yes					
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÚ 09 ATEX 0083X					
UL	cULus E115267 Industrial control equipment					
HazLoc	cCSAus 244665 Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5					
DNV	Temperature: B (0 - 55°C) Humidity: B (up to 100%) Vibration: B (4 g) EMC: B (bridge and open deck)					
LR	ENV1					
KR	Yes					
ABS	Yes					
EAC	Yes					
KC	-	Yes	-	Yes		-
CPU and X2X Link power supply						
Input voltage	24 VDC -15% / +20%					
Input current	Max. 1.5 A					
Fuse	Integrated, cannot be replaced					
Reverse polarity protection	Yes					
X2X Link power supply output						
Nominal output power	7 W ³⁾					
Parallel connection	Yes ⁴⁾					
Redundant operation	Yes					
Input I/O power supply						
Input voltage	24 VDC -15% / +20%					
Fuse	Required line fuse: Max. 10 A, slow-blow					
Output I/O power supply						
Nominal output voltage	24 VDC					
Permissible contact load	10 A					
Power supply - General information						
Status indicators	Overload, operating status, module status, RS232 data transfer					
Diagnostics						
RS232 data transfer	Yes, using LED status indicator					
Module run/error	Yes, using LED status indicator and software					
Overload	Yes, using LED status indicator and software					

Table 2: X20CP1583, X20CP1584, X20cCP1584, X20CP1585, X20CP1586, X20cCP1586 - Technical data

X20(c)CP158x and X20(c)CP358x

Order number	X20CP1583	X20CP1584	X20cCP1584	X20CP1585	X20CP1586	X20cCP1586
Electrical isolation						
I/O supply - I/O power supply	No					
CPU/X2X Link supply - CPU/X2X Link power supply	Yes					
Controller						
CompactFlash slot	1					
Real-time clock	Nonvolatile, resolution 1 s, -10 to 10 ppm accuracy at 25°C					
FPU	Yes					
Processor						
Type	Atom E620T		Atom E640T		Atom E680T	
Clock frequency	333 MHz	0.6 GHz		1 GHz	1.6 GHz	
L1 cache						
Data code	24 kB					
Program code	32 kB					
L2 cache	-	512 kB				
Integrated I/O processor	Processes I/O data points in the background					
Modular interface slots	1					
Remanent variables	Max. 64 kB ⁵⁾	Max. 256 kB ⁵⁾			Max. 1 MB ⁵⁾	
Shortest task class cycle time	800 µs	400 µs		200 µs	100 µs	
Typical instruction cycle time	0.01 µs	0.0075 µs		0.0044 µs	0.0027 µs	
Data buffering						
Battery monitoring	Yes					
Lithium battery	Min. 2 years at 23°C ambient temperature					
Standard memory						
RAM	128 MB DDR2 SDRAM	256 MB DDR2 SDRAM			512 MB DDR2 SDRAM	
User RAM	1 MB SRAM ⁶⁾					
Interfaces						
Interface IF1						
Signal	RS232					
Variant	Connection via 12-pin terminal block X20TB12				Connection made using 12-pin terminal block X20TB12	Connection via 12-pin terminal block X20TB12
Max. distance	900 m					
Transfer rate	Max. 115.2 kbit/s					
Interface IF2						
Signal	Ethernet					
Variant	1x RJ45 shielded					
Line length	Max. 100 m between 2 stations (segment length)					
Transfer rate	10/100/1000 Mbit/s					
Transfer						
Physical layer	10BASE-T/100BASE-TX/1000BASE-T					
Half-duplex	Yes					
Full-duplex	Yes					
Autonegotiation	Yes					
Auto-MDI/MDIX	Yes					
Interface IF3						
Fieldbus	POWERLINK (V1/V2) managing or controlled node					
Type	Type 4 ⁷⁾					
Variant	1x RJ45 shielded					
Line length	Max. 100 m between 2 stations (segment length)					
Transfer rate	100 Mbit/s					
Transfer						
Physical layer	100BASE-TX					
Half-duplex	Yes					
Full-duplex	POWERLINK mode: No / Ethernet mode: Yes					
Autonegotiation	Yes					
Auto-MDI/MDIX	Yes					
Interface IF4						
Type	USB 1.1/2.0					
Variant	Type A					
Max. output current	0.5 A					
Interface IF5						
Type	USB 1.1/2.0					
Variant	Type A					
Max. output current	0.5 A					
Interface IF6						
Fieldbus	X2X Link master					
Electrical properties						
Electrical isolation	Ethernet (IF2), POWERLINK (IF3) and X2X (IF6) isolated from each other, from other interfaces and from PLC					

Table 2: X20CP1583, X20CP1584, X20cCP1584, X20CP1585, X20CP1586, X20cCP1586 - Technical data

Order number	X20CP1583	X20CP1584	X20cCP1584	X20CP1585	X20CP1586	X20cCP1586
Operating conditions						
Mounting orientation						
Horizontal	Yes					
Vertical	Yes					
Installation elevation above sea level						
0 to 2000 m	No limitation					
>2000 m	Reduction of ambient temperature by 0.5°C per 100 m					
Degree of protection per EN 60529	IP20					
Ambient conditions						
Temperature						
Operation						
Horizontal mounting orientation	-25 to 60°C					
Vertical mounting orientation	-25 to 50°C					
Derating	See section "Derating".					
Storage	-40 to 85°C					
Transport	-40 to 85°C					
Relative humidity						
Operation	5 to 95%, non-condensing	Up to 100%, condensing		5 to 95%, non-condensing		Up to 100%, condensing
Storage	5 to 95%, non-condensing					
Transport	5 to 95%, non-condensing					
Mechanical properties						
Note	Order application memory (CompactFlash) separately Backup battery included in delivery X20 end cover plate (right) included in delivery 12-pin X20 terminal block included in delivery Interface module slot covers included in delivery					
Dimensions						
Width	150 mm					
Height	99 mm					
Depth	85 mm					
Weight	400 g					

Table 2: X20CP1583, X20CP1584, X20cCP1584, X20CP1585, X20CP1586, X20cCP1586 - Technical data

- 1) For details about *storage health data*, see Automation Help.
- 2) The specified values are maximum values. For examples of the exact calculation, see section "Mechanical and electrical configuration" in the X20 system user's manual.
- 3) When operated at temperatures above 55°C, a derating of the nominal output power to 5 W for the X2X Link power supply must be taken into account.
- 4) In parallel operation, it is only permitted to expect 75% of the nominal power. It is important to make sure that all power supply units operated in parallel are switched on and off at the same time.
- 5) The memory size for remanent variables is configurable in Automation Studio.
- 6) 1 MB SRAM minus the configured remanent variables.
- 7) For additional information, see section "Communication / POWERLINK / General information / Hardware - IF/LS" in Automation Help.

6 Order data - X20CP358x



Order number	Short description
	X20 PLCs
X20CP3583	X20 PLC, Atom 333 MHz (compatible), 128 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot covers and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20CP3584	X20 PLC, Atom 0.6 GHz, 256 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot covers and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20cCP3584	X20 PLC, coated, Atom 0.6 GHz, 256 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot cover and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20CP3585	X20 PLC, Atom 1.0 GHz, 256 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot covers and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20CP3586	X20 PLC, Atom 1.6 GHz, 512 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot covers and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
X20cCP3586	X20 PLC, coated, Atom 1.6 GHz, 512 MB DDR2 RAM, 1 MB SRAM, removable application memory: CompactFlash, 3 insert slots for X20 interface modules, 2 USB interfaces, 1 RS232 interface, 1 Ethernet interface 10/100/1000BASE-T, 1 POWERLINK interface, including power supply module, 1x terminal block X20TB12, slot covers and X20 end cover plate X20AC0SR1 (right) included, order application memory separately!
	Required accessories
	CompactFlash cards
0CFCRD.016GE.02	CompactFlash 16 GB extended temp.
0CFCRD.0512E.02	CompactFlash 512 MB extended temp.
0CFCRD.1024E.02	CompactFlash 1024 MB extended temp.
0CFCRD.2048E.02	CompactFlash 2048 MB extended temp.
0CFCRD.4096E.02	CompactFlash 4096 MB extended temp.
0CFCRD.8192E.02	CompactFlash 8 GB extended temp.
	Included in delivery
	Batteries
4A0006.00-000	Lithium battery, 3 V / 950 mAh, button cell
	Locking plate
X20AC0SR1	X20 end cover plate, right
	Terminal blocks
X20TB12	X20 terminal block, 12-pin, 24 VDC keyed
	Optional accessories
	Batteries
0AC201.91	Lithium batteries 4 pcs., 3 V / 950 mAh button cell

Table 3: X20CP3583, X20CP3584, X20cCP3584, X20CP3585, X20CP3586, X20cCP3586 - Order data

Included in delivery

Order number	Short description
4A0006.00-000	Backup battery (see also "Battery" on page 18)
-	Interface module slot covers
X20AC0SR1	X20 end cover plate (right)
X20TB12	X20 terminal block, 12-pin, 24 V coding

7 X20CP358x - Technical data

Order number	X20CP3583	X20CP3584	X20cCP3584	X20CP3585	X20CP3586	X20cCP3586
Short description						
Interfaces	1x RS232, 1x Ethernet, 1x POWERLINK (V1/V2), 2x USB, 1x X2X Link					
System module	Controller					
General information						
B&R ID code	0xD45C	0xC3AD	0xE21D	0xC3AF	0xBF2B	0xE21E
Cooling	Fanless					
Status indicators	CPU function, Ethernet, POWERLINK, CompactFlash, battery					
Diagnostics						
Battery	Yes, using LED status indicator and software					
CPU function	Yes, using LED status indicator					
CompactFlash	Yes, using LED status indicator					
Ethernet	Yes, using LED status indicator					
POWERLINK	Yes, using LED status indicator					
Temperature	Yes, using software register					
Support						
Controller redundancy	No	Yes				
Storage health data support ¹⁾	Yes					
ACOPOS support	Yes					
Visual Components support	Yes					
Power consumption without interface module and USB	8.2 W	8.6 W		8.8 W		9.7 W
Power consumption for X2X Link power supply ²⁾	1.42 W					
Power consumption ²⁾						
Internal I/O	0.6 W					
Additional power dissipation caused by actuators (resistive) [W]	-					
Certifications						
CE	Yes					
UKCA	Yes					
ATEX	Zone 2, II 3G Ex nA nC IIA T5 Gc IP20, Ta (see X20 user's manual) FTZÚ 09 ATEX 0083X					
UL	cULus E115267 Industrial control equipment					
HazLoc	cCSAus 244665 Process control equipment for hazardous locations Class I, Division 2, Groups ABCD, T5					
DNV	Temperature: B (0 - 55°C) Humidity: B (up to 100%) Vibration: B (4 g) EMC: B (bridge and open deck)					
LR	ENV1					
KR	Yes					
ABS	Yes					
EAC	Yes					
KC	-	Yes	-	Yes		-
CPU and X2X Link power supply						
Input voltage	24 VDC -15% / +20%					
Input current	Max. 1.5 A					
Fuse	Integrated, cannot be replaced					
Reverse polarity protection	Yes					
X2X Link power supply output						
Nominal output power	7 W ³⁾					
Parallel connection	Yes ⁴⁾					
Redundant operation	Yes					
Input I/O power supply						
Input voltage	24 VDC -15% / +20%					
Fuse	Required line fuse: Max. 10 A, slow-blow					
Output I/O power supply						
Nominal output voltage	24 VDC					
Permissible contact load	10 A					
Power supply - General information						
Status indicators	Overload, operating status, module status, RS232 data transfer					
Diagnostics						
RS232 data transfer	Yes, using LED status indicator					
Module run/error	Yes, using LED status indicator and software					
Overload	Yes, using LED status indicator and software					

Table 4: X20CP3583, X20CP3584, X20cCP3584, X20CP3585, X20CP3586, X20cCP3586 - Technical data

X20(c)CP158x and X20(c)CP358x

Order number	X20CP3583	X20CP3584	X20cCP3584	X20CP3585	X20CP3586	X20cCP3586
Electrical isolation						
I/O supply - I/O power supply	No					
CPU/X2X Link supply - CPU/X2X Link power supply	Yes					
Controller						
CompactFlash slot	1					
Real-time clock	Nonvolatile, resolution 1 s, -10 to 10 ppm accuracy at 25°C					
FPU	Yes					
Processor						
Type	Atom E620T		Atom E640T		Atom E680T	
Clock frequency	333 MHz	0.6 GHz		1 GHz	1.6 GHz	
L1 cache						
Data code	24 kB					
Program code	32 kB					
L2 cache	-	512 kB				
Integrated I/O processor	Processes I/O data points in the background					
Modular interface slots	3					
Remanent variables	Max. 64 kB ⁵⁾	Max. 256 kB ⁵⁾			Max. 1 MB ⁵⁾	
Shortest task class cycle time	800 µs	400 µs		200 µs	100 µs	
Typical instruction cycle time	0.01 µs	0.0075 µs		0.0044 µs	0.0027 µs	
Data buffering						
Battery monitoring	Yes					
Lithium battery	Min. 2 years at 23°C ambient temperature					
Standard memory						
RAM	128 MB DDR2 SDRAM	256 MB DDR2 SDRAM			512 MB DDR2 SDRAM	
User RAM	1 MB SRAM ⁶⁾					
Interfaces						
Interface IF1						
Signal	RS232					
Variant	Connection via 12-pin terminal block X20TB12					
Max. distance	900 m					
Transfer rate	Max. 115.2 kbit/s					
Interface IF2						
Signal	Ethernet					
Variant	1x RJ45 shielded					
Line length	Max. 100 m between 2 stations (segment length)					
Transfer rate	10/100/1000 Mbit/s					
Transfer						
Physical layer	10BASE-T/100BASE-TX/1000BASE-T					
Half-duplex	Yes					
Full-duplex	Yes					
Autonegotiation	Yes					
Auto-MDI/MDIX	Yes					
Interface IF3						
Fieldbus	POWERLINK (V1/V2) managing or controlled node					
Type	Type 4 ⁷⁾					
Variant	1x RJ45 shielded					
Line length	Max. 100 m between 2 stations (segment length)					
Transfer rate	100 Mbit/s					
Transfer						
Physical layer	100BASE-TX					
Half-duplex	Yes					
Full-duplex	POWERLINK mode: No / Ethernet mode: Yes					
Autonegotiation	Yes					
Auto-MDI/MDIX	Yes					
Interface IF4						
Type	USB 1.1/2.0					
Variant	Type A					
Max. output current	0.5 A					
Interface IF5						
Type	USB 1.1/2.0					
Variant	Type A					
Max. output current	0.5 A					
Interface IF6						
Fieldbus	X2X Link master					
Electrical properties						
Electrical isolation	Ethernet (IF2), POWERLINK (IF3) and X2X (IF6) isolated from each other, from other interfaces and from PLC					
Operating conditions						
Mounting orientation						
Horizontal	Yes					
Vertical	Yes					

Table 4: X20CP3583, X20CP3584, X20cCP3584, X20CP3585, X20CP3586, X20cCP3586 - Technical data


Order number	X20CP3583	X20CP3584	X20cCP3584	X20CP3585	X20CP3586	X20cCP3586
Installation elevation above sea level						
0 to 2000 m	No limitation					
>2000 m	Reduction of ambient temperature by 0.5°C per 100 m					
Degree of protection per EN 60529	IP20					
Ambient conditions						
Temperature						
Operation						
Horizontal mounting orientation	-25 to 60°C					
Vertical mounting orientation	-25 to 50°C					
Derating	See section "Derating".					
Storage	-40 to 85°C					
Transport	-40 to 85°C					
Relative humidity						
Operation	5 to 95%, non-condensing		Up to 100%, condensing		5 to 95%, non-condensing	Up to 100%, condensing
Storage	5 to 95%, non-condensing					
Transport	5 to 95%, non-condensing					
Mechanical properties						
Note	Order application memory (CompactFlash) separately Backup battery included in delivery X20 end cover plate (right) included in delivery 12-pin X20 terminal block included in delivery Interface module slot covers included in delivery					
Dimensions						
Width	200 mm					
Height	99 mm					
Depth	85 mm					
Weight	470 g					

Table 4: X20CP3583, X20CP3584, X20cCP3584, X20CP3585, X20CP3586, X20cCP3586 - Technical data

- 1) For details about *storage health data*, see Automation Help.
- 2) The specified values are maximum values. For examples of the exact calculation, see section "Mechanical and electrical configuration" in the X20 system user's manual.
- 3) When operated at temperatures above 55°C, a derating of the nominal output power to 5 W for the X2X Link power supply must be taken into account.
- 4) In parallel operation, it is only permitted to expect 75% of the nominal power. It is important to make sure that all power supply units operated in parallel are switched on and off at the same time.
- 5) The memory size for remanent variables is configurable in Automation Studio.
- 6) 1 MB SRAM minus the configured remanent variables.
- 7) For additional information, see section "Communication / POWERLINK / General information / Hardware - IF/LS" in Automation Help.


8 Operating and connection elements

X20CP158x

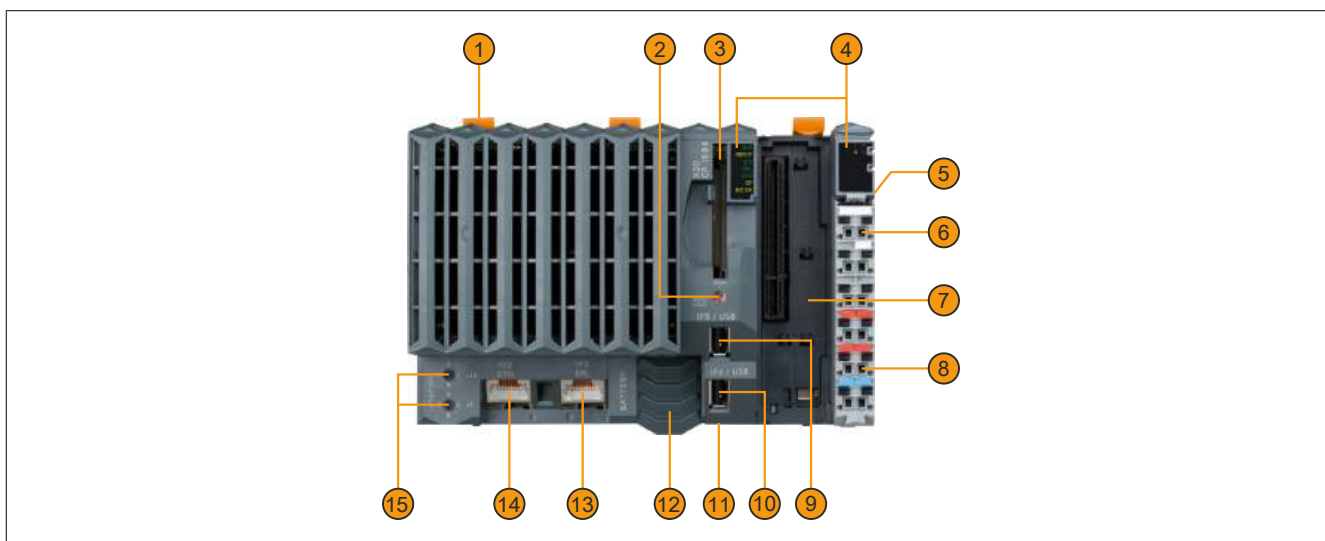

1	Top-hat rail latch	2	Selecting application memory
3	Slot for CompactFlash	4	LED status indicators
5	IF6 - X2X Link	6	IF1 - RS232
7	Slot for interface modules	8	Terminal block for controller and I/O supply, RS232 connection
9	IF5 - USB	10	IF4 - USB
11	Reset button	12	Battery compartment
13	IF3 - POWERLINK	14	IF2 - Ethernet
15	Ethernet station address	-	-


X20CP358x

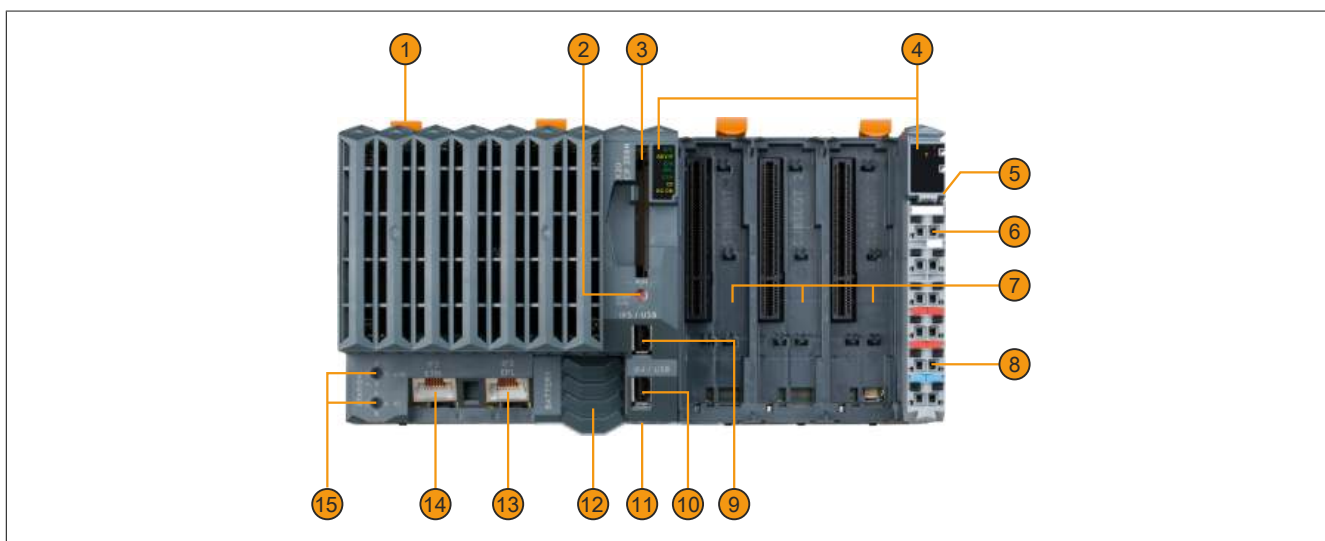

1	Top-hat rail latch	2	Selecting application memory
3	Slot for CompactFlash	4	LED status indicators
5	IF6 - X2X Link	6	IF1 - RS232
7	Slots for interface modules	8	Terminal block for controller and I/O supply, RS232 connection
9	IF5 - USB	10	IF4 - USB
11	Reset button	12	Battery compartment
13	IF3 - POWERLINK	14	IF2 - Ethernet
15	Ethernet station address	-	-

8.1 LED status indicators

8.1.1 X20 controllers - LED status indicators

Figure	LED	Color	Status	Description
	R/E	Green	On	Application running
			Blinking	System startup: The controller is initializing the application, all bus systems and I/O modules. ¹⁾
			Double flash	System startup during firmware update ¹⁾
		Red	On	Mode SERVICE ²⁾ or BOOT ²⁾
			Blinking	If LED "R/E" blinks red and LED "RDY/F" blinks yellow, a license violation has occurred.
			Double flash	System startup: Installation error ³⁾
	RDY/F	Yellow	On	Mode SERVICE ²⁾ or BOOT ²⁾
	Blinking		If LED "RDY/F" blinks yellow and LED "R/E" blinks red, a license violation has occurred.	
	S/E	Green/Red		Status/Error LED. LED states are described in section "LED "S/E" (status/error LED)" on page 12.
	PLK	Green	On	The link to the POWERLINK remote station is established.
			Blinking	The link to the POWERLINK remote station is established. The LED blinks if Ethernet activity is taking place on the bus.
	ETH	Green	On	The link to the Ethernet remote station is established.
			Blinking	The link to the Ethernet remote station is established. The LED blinks if Ethernet activity is taking place on the bus.
	CF	Green	On	CompactFlash inserted and detected
		Yellow	On	CompactFlash read/write access
DC	Yellow	On	Controller power supply unit OK	
	Red	On	Backup battery empty	

1) This process can take several minutes depending on the configuration.

2) The operating states are described in "Real-time operating system - Method of operation - Operating states" in Automation Help.

3) AR 4.93 and later: The project installation (initial installation or update) via USB flash drive was aborted with an error.

8.1.1.1 LED "S/E" (status/error LED)

This LED is a green/red dual LED and indicates the state of the POWERLINK interface. The LED states have a different meaning depending on the operating mode of the POWERLINK interface.

8.1.1.1.1 Ethernet mode

In this mode, the interface is operated as an Ethernet interface.

LED "S/E"		Description
Green	Red	
On	Off	The interface is operated as an Ethernet interface.

Table: LED "S/E": Interface in Ethernet mode

8.1.1.1.2 POWERLINK V1 mode

LED "S/E"		Current state of the POWERLINK node
Green	Red	
On	Off	The POWERLINK node is running with no errors.
Off	On	A system error occurred. The type of error can be read using the PLC logbook. An irreparable problem has occurred. The system can no longer properly carry out its tasks. This state can only be changed by resetting the module.
Blinking alternately		The POWERLINK managing node has failed. This error code can only occur when operated as a controlled node. This means that the set node number lies within the range 0x01 - 0xFD.
Off	Blinking	System stop. The red blinking LED indicates an error code (see "System stop error codes" on page 14).
Off	Off	The interface is either not active or one of the following states or errors is present: <ul style="list-style-type: none"> • The device is switched off. • The device is in the startup phase. • The interface or device is not configured correctly in Automation Studio. • The interface or device is defective.

Table 5: LED "S/E": POWERLINK V1 mode

8.1.1.1.3 POWERLINK V2 mode

Error message

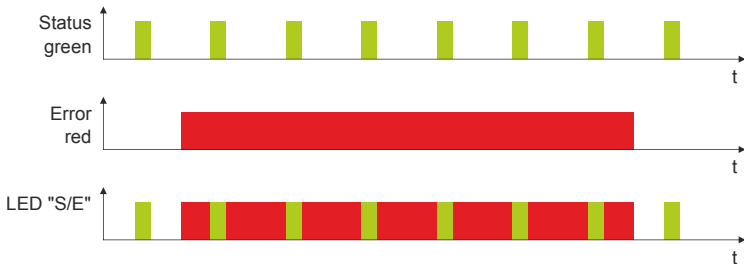
LED "S/E"		Description
Green	Red	
Off	On	The interface is in error mode (failed Ethernet frames, increased number of collisions on the network, etc.). Note: Several red blinking signals are displayed immediately after the device is switched on. These are not errors, however.
Blinking	On	If an error occurs in the following modes, then the green LED blinks over the red LED: <ul style="list-style-type: none"> • PRE_OPERATIONAL_1 • PRE_OPERATIONAL_2 • READY_TO_OPERATE 


Table: LED "S/E" - Error message (interface in POWERLINK mode)

Interface status

LED "S/E"		Description
Green	Red	
Off	Off	<p>Mode: NOT_ACTIVE The interface is either in mode NOT_ACTIVE or one of the following modes or errors is present:</p> <ul style="list-style-type: none"> The device is switched off. The device is in the startup phase. The interface or device is not configured correctly in Automation Studio. The interface or device is defective. <p>Managing node (MN) The network is monitored for POWERLINK frames. If a frame is not received within the configured time window (timeout), the interface immediately enters mode PRE_OPERATIONAL_1. If POWERLINK communication is detected before the time has elapsed, however, the MN is not started.</p> <p>Controlled node (CN) The network is monitored for POWERLINK frames. If a frame is not received within the configured time window (timeout), the interface immediately enters mode PRE_OPERATIONAL_1. If POWERLINK communication is detected before this time expires, however, the interface immediately enters mode PRE_OPERATIONAL_1.</p>
Flickering (approx. 10 Hz)	Off	<p>Mode: BASIC_ETHERNET The interface is in mode BASIC_ETHERNET. The interface is operated in <i>Ethernet mode</i>.</p> <p>Managing node (MN) This mode can only be exited by resetting the controller.</p> <p>Controlled node (CN) If POWERLINK communication is detected during this mode, the interface enters mode PRE_OPERATIONAL_1.</p>
Single flash (approx. 1 Hz)	Off	<p>Mode: PRE_OPERATIONAL_1 The interface is in mode PRE_OPERATIONAL_1.</p> <p>Managing node (MN) The MN is in "reduced cycle" mode. The CNs are configured in this mode. Cyclic communication is not yet taking place.</p> <p>Controlled node (CN) The CN can be configured by the MN in this mode. The CN waits until it receives an SoC frame and then switches to mode PRE_OPERATIONAL_2.</p>
	On	<p>Controlled node (CN) If the red LED lights up in this mode, this means that the MN has failed.</p>
Double flash (approx. 1 Hz)	Off	<p>Mode: PRE_OPERATIONAL_2 The interface is in mode PRE_OPERATIONAL_2.</p> <p>Managing node (MN) The MN starts cyclic communication (cyclic input data is not yet evaluated). The CNs are configured in this mode.</p> <p>Controlled node (CN) The CN can be configured by the MN in this mode. A command then switches the mode to READY_TO_OPERATE.</p>
	On	<p>Controlled node (CN) If the red LED lights up in this mode, this means that the MN has failed.</p>
Triple flash (approx. 1 Hz)	Off	<p>Mode: READY_TO_OPERATE The interface is in mode READY_TO_OPERATE.</p> <p>Managing node (MN) Cyclic and asynchronous communication. Received PDO data is ignored.</p> <p>Controlled node (CN) The configuration of the CN is completed. Normal cyclic and asynchronous communication. The transmitted PDO data corresponds to the PDO mapping. However, cyclic data is not yet evaluated.</p>
	On	<p>Controlled node (CN) If the red LED lights up in this mode, this means that the MN has failed.</p>
On	Off	<p>Mode: OPERATIONAL The interface is in mode OPERATIONAL. PDO mapping is active and cyclic data is evaluated.</p>
Blinking (approx. 2.5 Hz)	Off	<p>Mode: STOPPED The interface is in mode STOPPED.</p> <p>Managing node (MN) This mode does not occur for the MN.</p> <p>Controlled node (CN) Output data is not being output, and no input data is being provided. This mode can only be reached and exited by a corresponding command from the MN.</p>

Table: LED "S/E" - Interface state (interface in POWERLINK mode)


Blink times

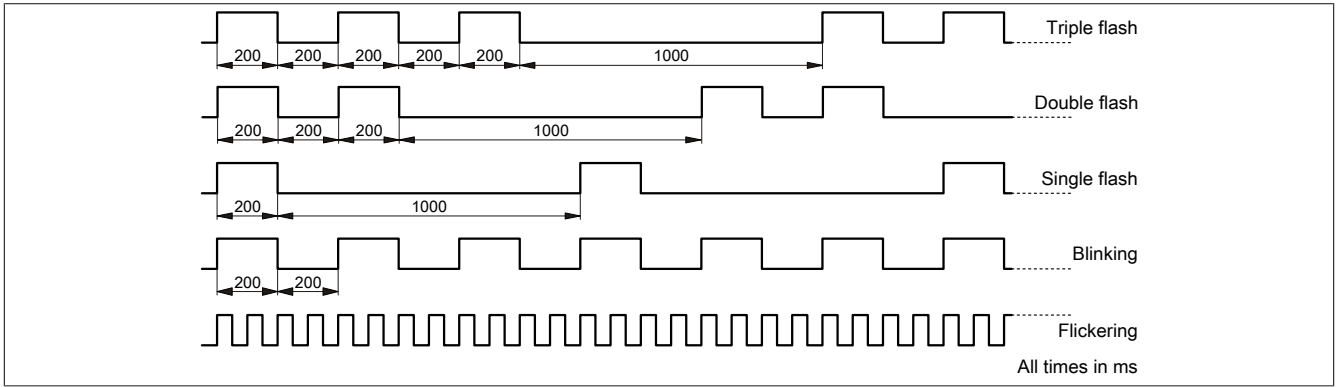

8.1.1.2 System stop error codes

A system stop error can occur due to incorrect configuration or defective hardware.

The error code is indicated by LED "S/E" blinking red. The blinking signal of the error code consists of 4 switch-on phases with short (150 ms) or long (600 ms) duration. The error code is repeated every 2 seconds.

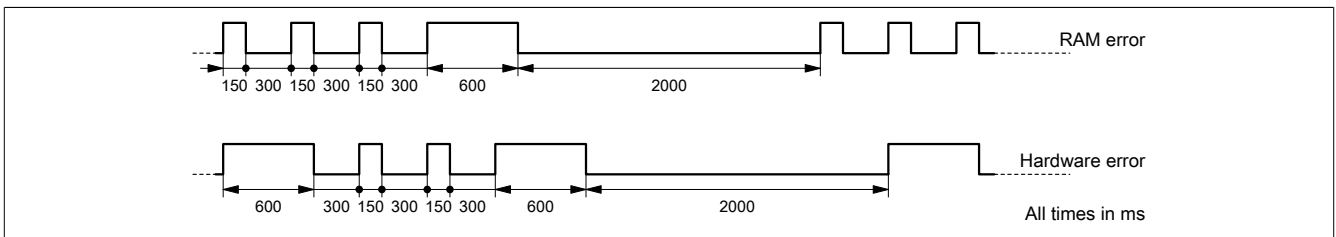

Error	Error description
RAM error	The device is defective and must be replaced.
Hardware error	The device or a system component is defective and must be replaced.

8.1.2 LED status indicators for the integrated power supply unit

For a description of the various operating modes, see section "Additional information - Diagnostic LEDs" in the X20 system user's manual.

Figure	LED	Color	Status	Description
	r	Green	Off	No power to module
			Single flash	Mode RESET
			Blinking	Mode PREOPERATIONAL
			On	Mode RUN
	e	Red	Off	Module not supplied with power or everything OK
			Double flash	The LED indicates one of the following states: <ul style="list-style-type: none"> The X2X Link power supply of the power supply unit is overloaded. I/O power supply too low The input voltage for the X2X Link power supply is too low.
	e + r	Solid red / Single green flash	Invalid firmware	
	S	Yellow	Off	No RS232 activity
			On	The LED lights up when data is being transmitted or received via the RS232 interface.
	l	Red	Off	The X2X Link power supply is within the valid range.
On			The X2X Link power supply of the power supply unit is overloaded.	

8.2 Operating mode switch

The operating mode switch is used to set the operating mode.




Switch position	Operating mode	Description
BOOT	BOOT	In this switch position, Boot AR is started and the runtime system can be installed via the online interface (B&R Automation Studio). User flash memory is erased only when the download begins.
RUN	RUN	Mode RUN
DIAG	DIAGNOSE	The controller is starting up in diagnostic mode. Program sections in User RAM and User Flash-PROM are not initialized. After diagnostic mode, the controller always boots with a warm restart.

Information:

A switch position other than those described here is not permitted!

8.3 Reset button

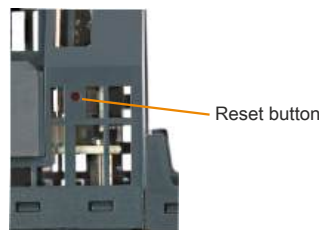

The reset button is located below the USB interfaces on the bottom of the housing. It can be pressed with any small pointed object (e.g. paper clip). Pressing the reset button triggers a hardware reset, which means:

- All application programs are stopped.
- All outputs are set to zero.

The controller then starts up in service mode by default. The startup mode that follows after pressing the reset button can be set in Automation Studio.

8.4 Slot for application memory

Application memory is required to operate the controllers. The application memory is provided in the form of a CompactFlash card. This is not included in delivery with the controllers; it must be ordered separately as an accessory!

Information:


The CompactFlash card must not be removed during operation.

8.5 Project installation

Project installation is described in "Project management - Project installation" in Automation Help.

8.6 RS232 interface (IF1)

The non-electrically isolated RS232 interface is designed as an online interface for communication with the programming device.

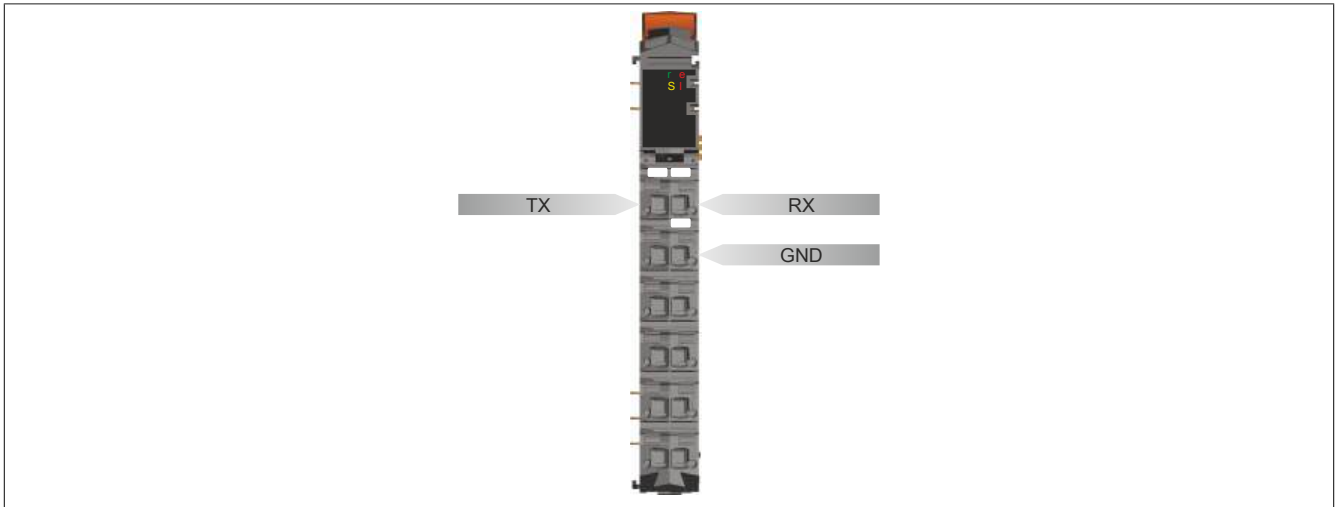

8.7 Ethernet interface (IF2)



The IF2 is executed as the 10 BASE-T / 100 BASE-TX / 1000 BASE-T gigabit Ethernet interface.

The INA2000 station number of the Ethernet interface is set using the two hex switches.

For information about wiring X20 modules with an Ethernet interface, see section "Mechanical and electrical configuration - Wiring guidelines for X20 modules with Ethernet cables" in the X20 user's manual.


Information:

The Ethernet interface is not suitable for POWERLINK.

When using the POWERLINK interface, the Ethernet interface is not permitted to be operated with an IP address from the POWERLINK address range.

POWERLINK address range: 192.168.100.x

Pinout

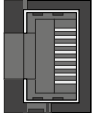Interface	Pinout		
	Pin	Ethernet	
 Shielded RJ45 port	1	D1+	Data 1+
	2	D1-	Data 1-
	3	D2+	Data 2+
	4	D3+	Data 3+
	5	D3-	Data 3-
	6	D2-	Data 2-
	7	D4+	Data 4+
	8	D4-	Data 4-

8.8 POWERLINK interface (IF3)

The controllers are equipped with a POWERLINK V1/V2 interface.

POWERLINK V1

By default, the POWERLINK interface is operated as a managing node (MN). In the managing node, the node number is set to a fixed value of 0.

If the POWERLINK node is operated as a controlled node (CN), a node number from 1 to 253 can be set in the POWERLINK configuration in Automation Studio.

POWERLINK V2

Setting in Automation Studio

By default, the POWERLINK interface is operated as a managing node (MN). In the managing node, the node number is set to a fixed value of 240.

If the POWERLINK node is operated as a controlled node (CN), a node number from 1 to 239 can be set in the POWERLINK configuration in Automation Studio.

Setting with hex switches

The POWERLINK node number can also be set with the two onboard hex switches. These are normally used to set the INA2000 station number of the Ethernet interface. Switching takes place in the POWERLINK configuration in Automation Studio.

Node numbers from 0x01 to 0xF0 are permitted.

Switch position	Description
0x00	Reserved, switch position not permitted.
0x01 - 0xEF	Node number of the POWERLINK node. Operation as a controlled node (CN).
0xF0	Operation as a managing node (MN).
0xF1 - 0xFF	Reserved, switch position not permitted.


Ethernet mode

In this mode, the interface is operated as an Ethernet interface. The INA2000 station number is set using the Automation Studio software.

Pinout



For information about wiring X20 modules with an Ethernet interface, see section "Mechanical and electrical configuration - Wiring guidelines for X20 modules with Ethernet cables" in the X20 user's manual.

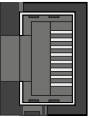Interface	Pinout		
	Pin	Ethernet	
 Shielded RJ45	1	RXD	Receive data
	2	RXD\	Receive data\
	3	TXD	Transmit data
	4	Termination	
	5	Termination	
	6	TXD\	Transmit data\
	7	Termination	
	8	Termination	

8.9 USB interfaces (IF4 and IF5)



IF4 and IF5 are non-galvanically isolated USB interfaces. The abbreviation USB stands for "Universal Serial Bus". Both USB interfaces support the USB 1.1 and 2.0 standards.

Information:

USB peripheral devices can be connected to the USB interfaces. Automation Runtime supports a selection of USB peripheral devices. For the supported USB classes, see the AR help documentation.

Information:

The following must be taken into account when using a USB peripheral device and grounded controller power supply (PELV):

- **Only USB peripheral devices with no connection between GND and ground are permitted to be connected. This is the case, e.g. with the USB dongle from B&R.**

8.10 Slots for interface modules

The controllers are equipped with 1 or 3 slots for interface modules.

Different bus or network systems can be flexibly integrated into the X20 system by selecting the appropriate interface module.

8.11 Battery

X20 controllers are equipped with a lithium battery. The lithium battery is located in a separate compartment and protected by a cover.

Backup battery data

Order number	
4A0006.00-000	1 pcs.
0AC201.91	4 pcs.
Short description	Lithium battery, 3 V / 950 mAh, button cell
Storage temperature	-40 to 85°C
Storage time	Max. 3 years at 30°C
Relative humidity	0 to 95% (non-condensing)

The following areas are buffered:

- Remanent variables
- User RAM
- System RAM
- Real-time clock

Battery monitoring

The battery voltage is checked cyclically. The cyclic load test of the battery does not considerably shorten its service life; instead, it gives an early warning of weakened buffer capacity.

Status information "Battery OK" is available from system library function "BatteryInfo" and the controller's I/O mapping.

Replacement interval for battery

The battery should be replaced every 4 years. The replacement intervals recommended by B&R reflect the batteries' average service life and operating conditions. They do not correspond to the maximum buffer duration!

Important information about the battery exchange

The product design allows the battery to be changed when the controller is in a voltage-free state as well as when the controller is switched on. In some countries, however, changing is not permitted while operating voltage is applied. To prevent data loss, the battery must be changed within 1 min in a voltage-free state.


Warning!

The battery is only permitted to be replaced by a Renata CR2477N battery. The use of another battery may present a fire or explosion hazard.

The battery can explode if handled improperly. Do not recharge, disassemble or dispose of the battery in fire.

Procedure for replacing the battery

1. Perform electrostatic discharge at the top-hat rail or at the ground connection (do not reach into the power supply unit!)
2. Remove the cover for the lithium battery. Do this by sliding it down and away from the controller.

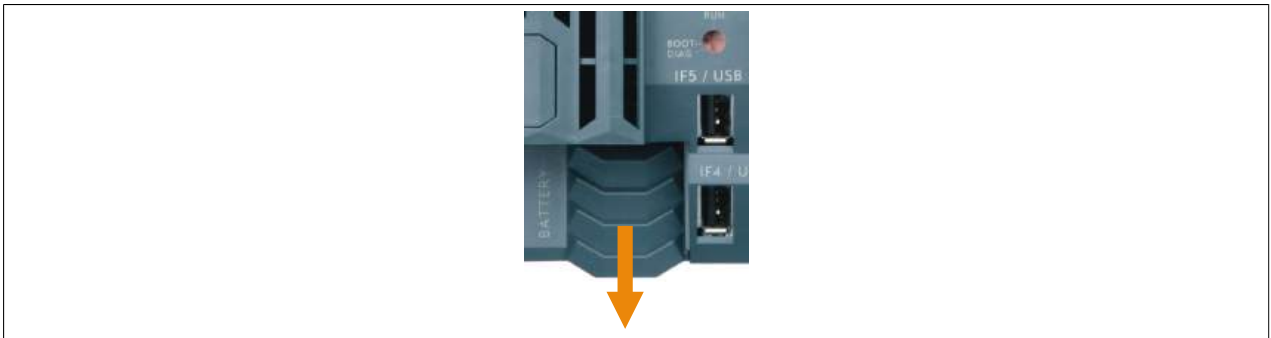

3. Push the empty battery out of the holder.
4. It is important to ensure that the new battery is not handled with moist or greasy fingers. Plastic tweezers can also be used. Do not touch the battery with pliers or metal tweezers → short circuit!
5. To insert the battery into the holder, place it with the "+" side up on the right part of the battery holder. Then press the battery into the battery holder.
6. Replace the cover.


Information:

Lithium batteries are hazardous waste! Used batteries should be disposed of in accordance with applicable local regulations.


9 Controller power supply

A power supply unit is integrated in the X20 controllers. It is equipped with a supply for the controller, X2X Link and the internal I/O power supply. The bus power supply and internal I/O power supply are galvanically isolated from each other.

Integrated power supply unit - Pinout

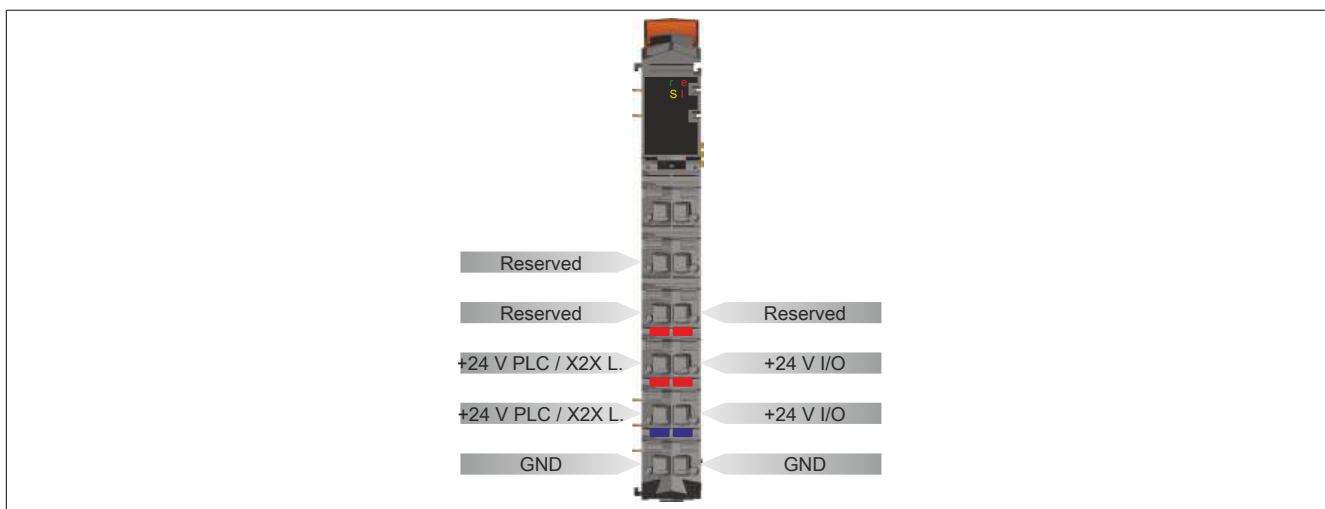


Connection example with 2 separate power supplies

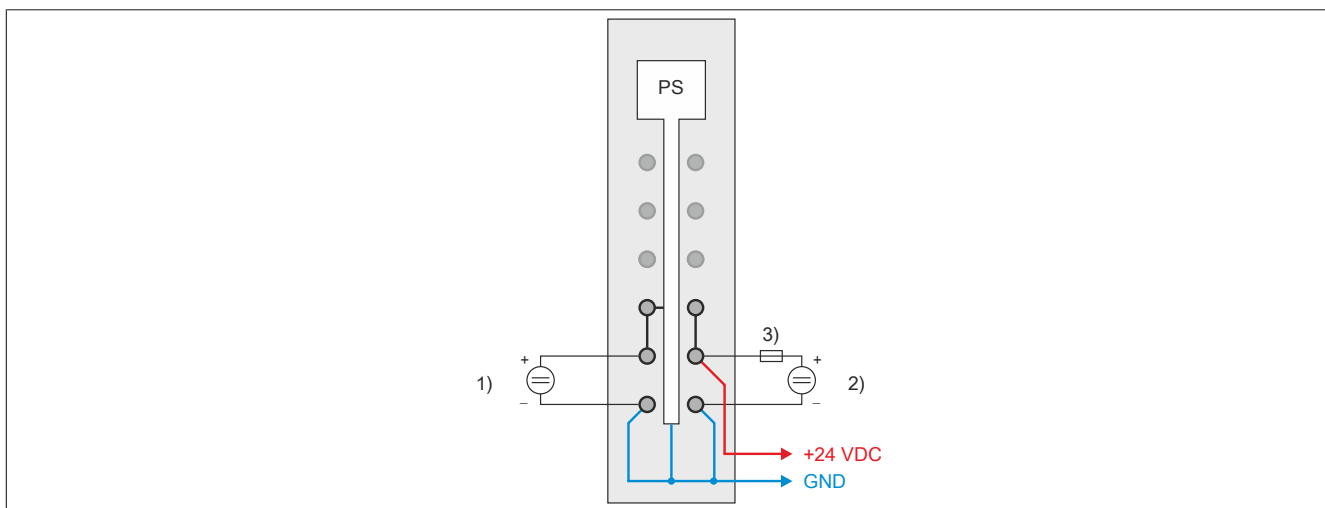

- 1) Supply for the PLC or X2X Link power supply
- 2) Supply for the I/O power supply
- 3) Fuse, 10 A slow-blow


Connection example with power supply and jumper

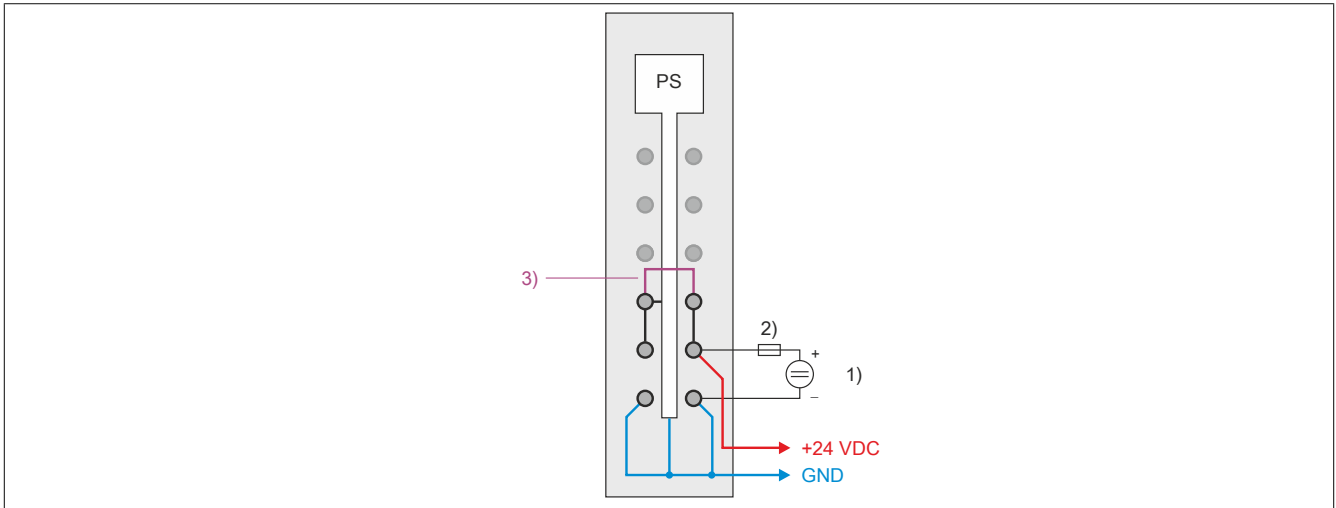

- 1) Supply for the I/O power supply
- 2) Fuse, 10 A slow-blow
- 3) Jumper

10 Derating

There is no derating when operated below 55°C. Above 55°C, the nominal output power for the X2X Link power supply must be reduced to 5 W.

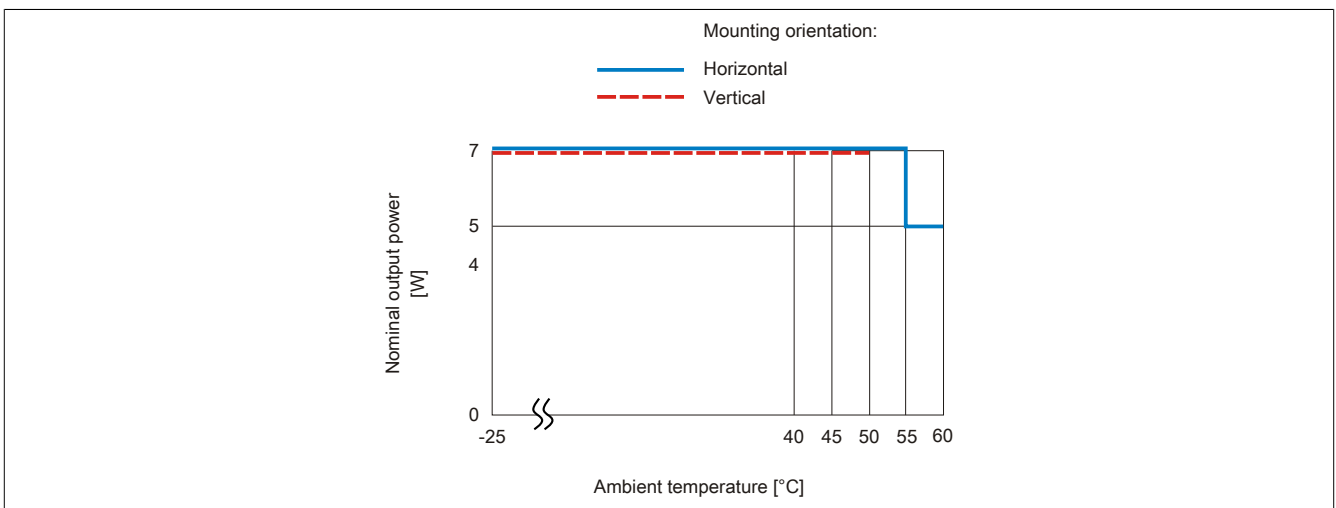

11 Overtemperature shutdown

To prevent damage, a shutdown – reset state – of the controller takes place at 110°C processor temperature or 95°C board temperature.

The following errors are entered in the logbook in the event of shutdown:

Error number	Short error text
9204	PLC restart triggered by the PLC CPU's temperature monitoring.
9210	Warning: Halt/Service after watchdog or manual reset.

12 Information about migrating from the X20CPx48x to the X20CPx58x

- A hardware upgrade is required for some X20 IFxxxx interface modules. This can be installed from Automation Studio by selecting **Tools / Upgrades** from the menu. In addition, a certain hardware revision is required for some modules. The following table provides an overview:

Order number	Minimum upgrade version	Minimum hardware revision
X20IF1020	1.1.5.1	H0
X20IF1030	1.1.5.1	I0
X20IF1041-1	-	-
X20IF1043-1	-	-
X20IF1051-1	-	-
X20IF1053-1	-	-
X20IF1061	-	E0
X20IF1061-1	-	-
X20IF1063	1.1.5.0	-
X20IF1063-1	-	-
X20IF1065	-	-
X20IF1072	1.0.5.1	-
X20IF1082	1.2.2.0	-
X20IF1082-2	1.2.1.0	-
X20IF1086-2	1.1.1.0	-
X20IF1091	1.0.5.1	-
X20IF10A1-1	-	-
X20IF10D1-1	-	-
X20IF10D3-1	-	-
X20IF10E1-1	-	-
X20IF10E3-1	-	-
X20IF10G3-1	-	-
X20IF2772	1.0.6.1	-
X20IF2792	1.0.5.1	-

Table 6: Minimum upgrade version and minimum hardware revision for X20 IFxxxx interface modules

- X20CPx58x controllers are supported starting with B&R Automation Studio V3.0.90.20.
- If an X20CPx48x should be replaced by an X20CPx58x in an existing Automation Studio configuration, the X20CPx58x may not be listed as one of the available options even though the upgrade for the controller has already been installed. In such a case, an upgrade of the X20CPx48x is required.
- Starting with Automation Runtime 4.x, USB devices are integrated in Automation Runtime dynamically so that they no longer must be configured in Automation Studio. In order to use a USB device, its internal device name must be obtained at runtime. For an example, see Automation Help for the library "AsUSB / Examples".

13 General data points

This controller is equipped with general data points. These are not controller-specific; instead, they contain general information such as system time and heat sink temperature.

General data points are described in section "Additional information - General controller data points" in the X20 system user's manual.